



Epson FastFoto Scanner Installation Instructions


1. Step One is to install the Epson FastFoto software. To do that go to the following webpage, www.fastfoto.com/getstarted. The image below is the correct webpage. Click Download FastFoto Software.

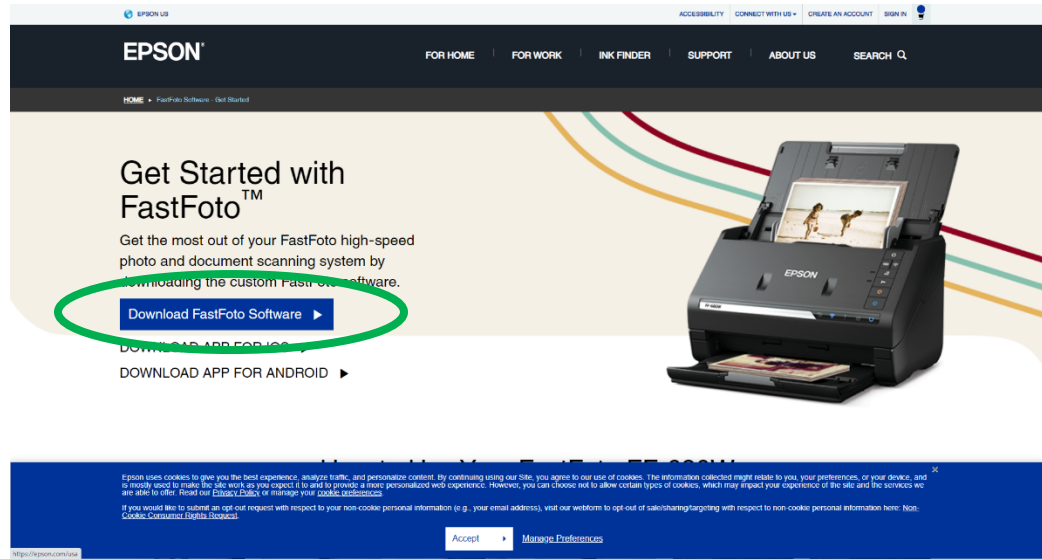

2. Next Click on Epson FastFoto FF-680W

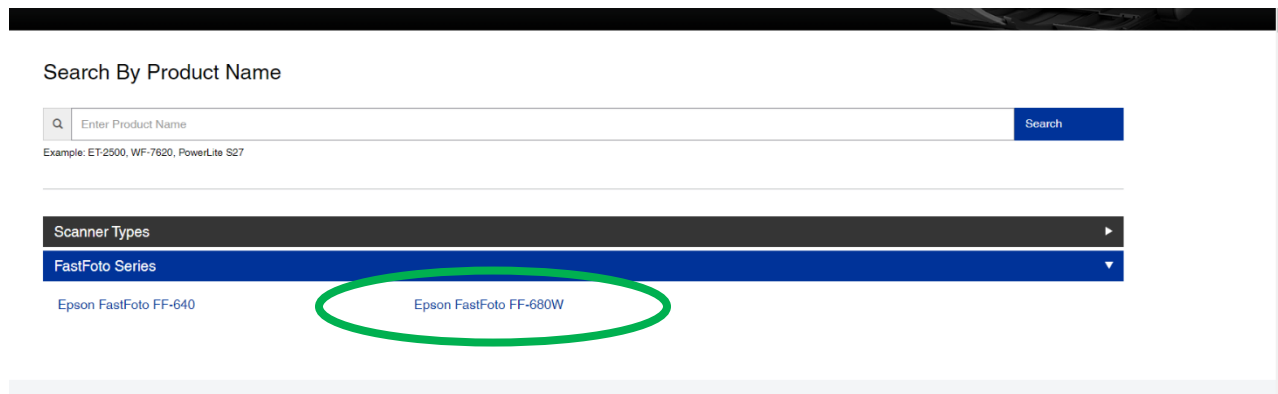

3. Choose your operating system from the dropdown menu. Then click Go.



Epson FastFoto FF-680W

Model: B11B237201 | [Product Home](#)

[Downloads](#) | [FAQs](#) | [Manuals and Warranty](#) | [Videos](#) | [Registration and Service Plans](#) | [Contact Us](#)

Note: Epson ScanSmart software is now available for your product. To set up your product and install Epson ScanSmart, download and run the **Drivers and Utilities Combo Package Installer**.

ATTENTION: Your operating system may not be detected below. It's important that you manually select your OS in the **Operating System** drop-down menu below to ensure you're viewing only compatible files.

Operating System:

Please select your operating system above.

** By downloading from this website, you are agreeing to abide by the terms and conditions of Epson's Software License Agreement.

4. The page will update with download information. Choose the following download type (Drivers and Utilities Combo Package Installer +). Click Download.

[Recommended For You](#) -


Drivers and Utilities Combo Package Installer + Download ▶

06/03/22 | 14.6 MB | FF680W_Lite_NA.exe

5. The program will automatically download and appear in your downloads file. If the download file does not open in your browser check your downloads files. You should see the following file name:

⬇️ FF680W_Lite_NA


- Open this file. The following pop-up message will appear. Click OK.

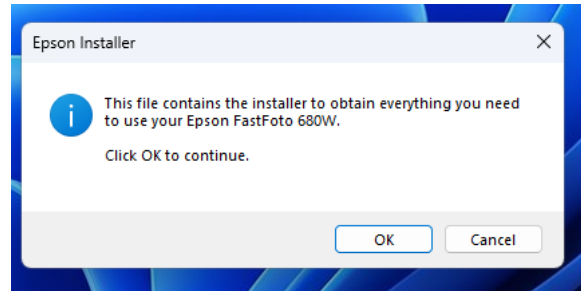


- Next a license agreement will pop up. Click Accept.




- Next an Additional Agreements page will display. Remove the Check from the Allow Software usage information to be collected. Then Click Next.

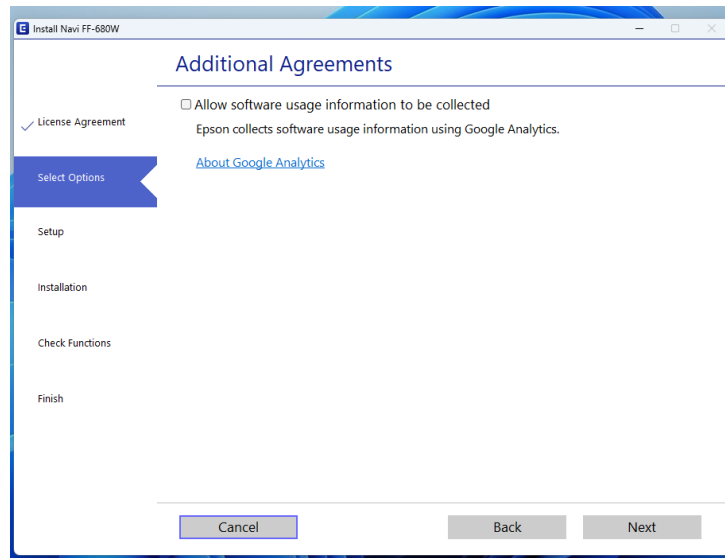

- Select your connection method. The Epson FastFoto Scanner works from both a wired and wireless connection. These instructions will take you through the wireless method. Click on Connect via wireless network (Wi-Fi.)

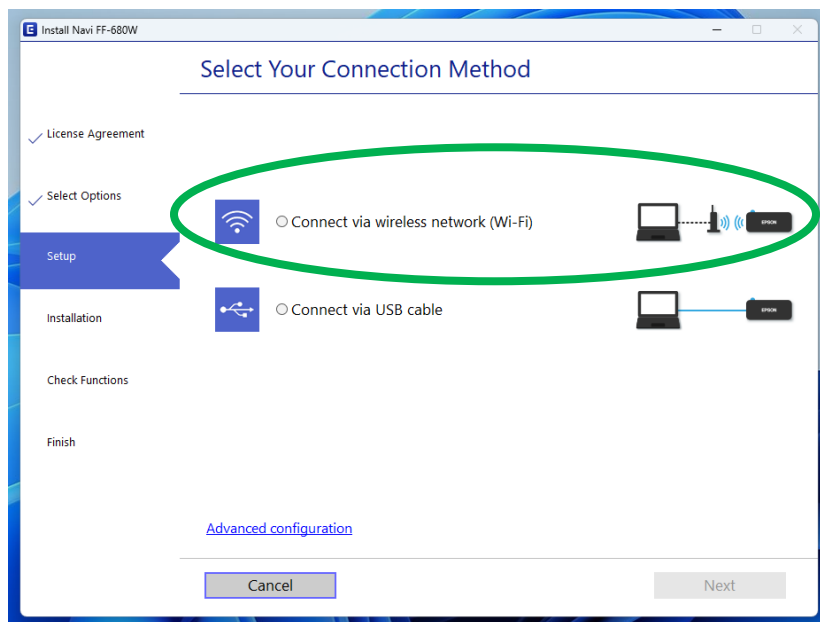

10. Select the Network Connection Method. Click Connect using temporary USB connection. Then click next.

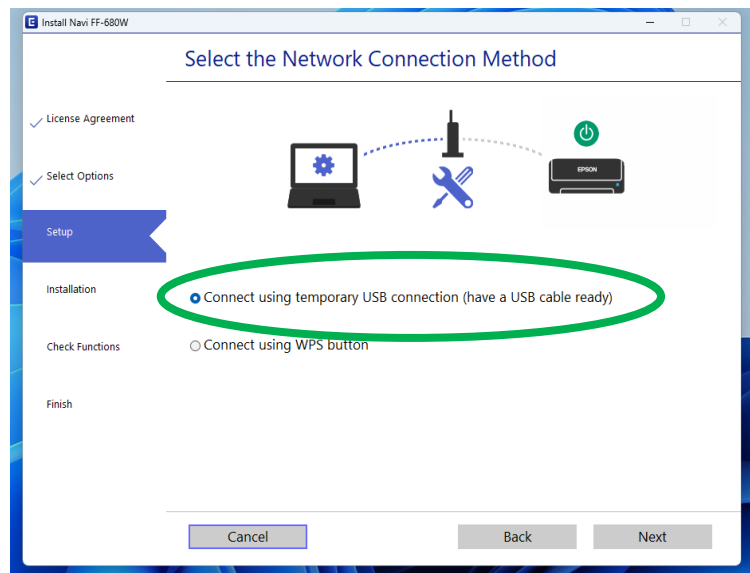


11. Power on the Epson FastFoto scanner. Then connect the provided USB to the scanner and to your computer. The scanner should start to connect automatically at this point.





12. The next page will display the names of available WiFi networks that the scanner finds. Select your home WiFi network that your computer is using. Next enter your WiFi password. The scanner will start Network setup after you input this information.

13. The next page will be Software to Install. Download all recommended software. Once all software has been downloaded you will see the following page. Click Next.

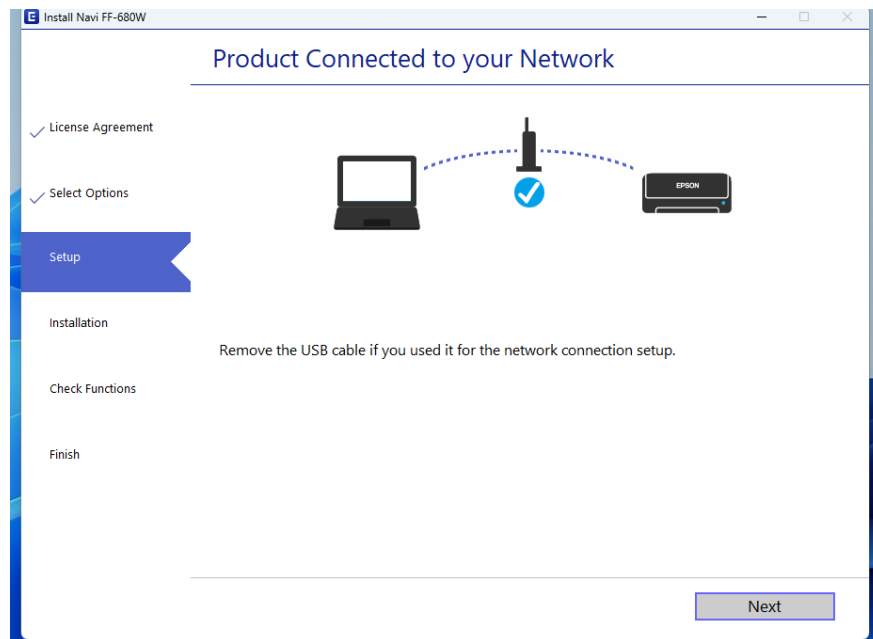

14. The next window will ask you about one touch button scanning. Click No. Then Click Skip.

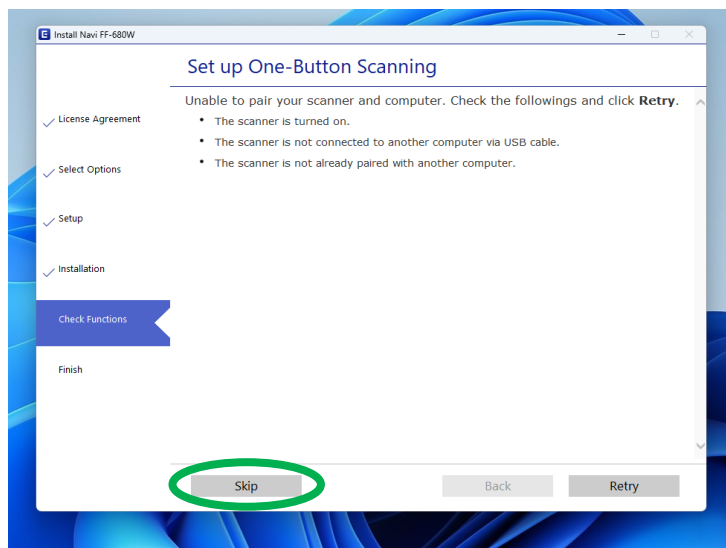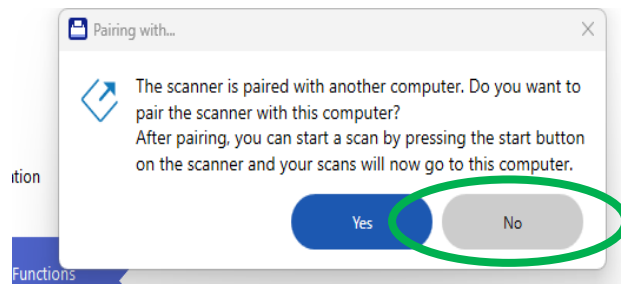

15. The next window will ask you where you want scanned photos to be saved. FastFoto defaults to saving in your Pictures file. You can click on the yellow Folder icon to the right of the saved location and choose your own default save location. Click Continue.

16. The next window asks about photo enhancement. We recommend leaving the settings as they are. The scanning software will automatically create a second copy of each photo and attempt to enhance the photo by removing red eye, enhancing colors, etc. Click Continue.

17. You are finished with setup and are now ready to start scanning! [For further instructions click here.](#)

18. When you close out of the software the first time you will be asked to register the scanner. Do not register the scanner, just close the window.