


# TOWOND

Projector Screen

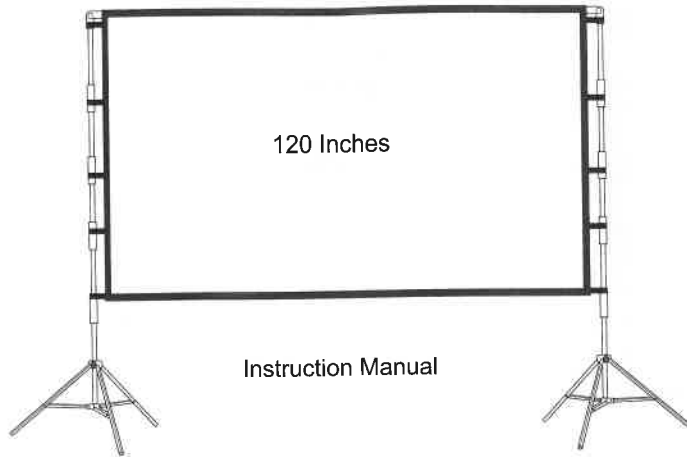

## List of Accessories

① Part A



② Part B



③



④



⑤



⑥



⑦




⑧

- (1) Part A (Crossbar\*7, Connector\*6, 90°Connector\*2)
- (2) Part B (Crossbar\*8, Connector\*8)
- (3) Triangle bracket\*2
- (4) Carrying case \*1
- (5) Sandbag\*2
- (6) Curtain\*1
- (7) Windproof rope x6
- (8) Ground Nails x6

## Curtain Installation Procedures

1. As shown in figure 1: Part A (crossbar\*7, connector\*6)  
Use the connectors to connect all the crossbars.


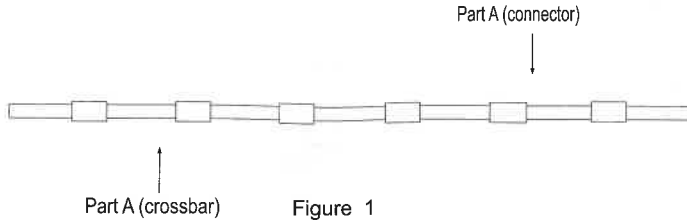


2. As shown in Figure 1 and Figure 2:  
Thread the screen onto the crossbar,  
then use 90° connectors to connect the left and right side.



3. As shown in figure:

- ① Loosen the top screw of the Triangle bracket as Figure 1.
- ② Unfold the Triangle bracket as Figure 2 and Figure 3.
- ③ And then tighten the Triangle bracket top screw as Figure 4.

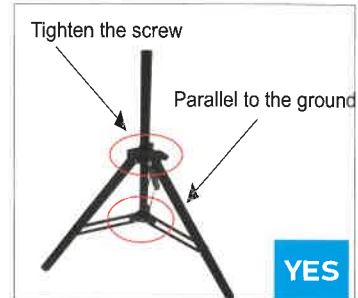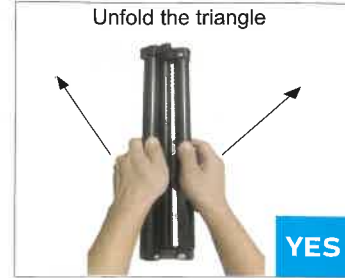

4. The wrong way to open the triangle bracket as Figure 1, Figure 2 .




Figure 1



Figure 2


5. As shown in Figure 1:

- (1) Connect Part B (crossbar\*8, connector\*8) as two long crossbars.
- (2) Connect the new long crossbar to the triangle bracket respectively.

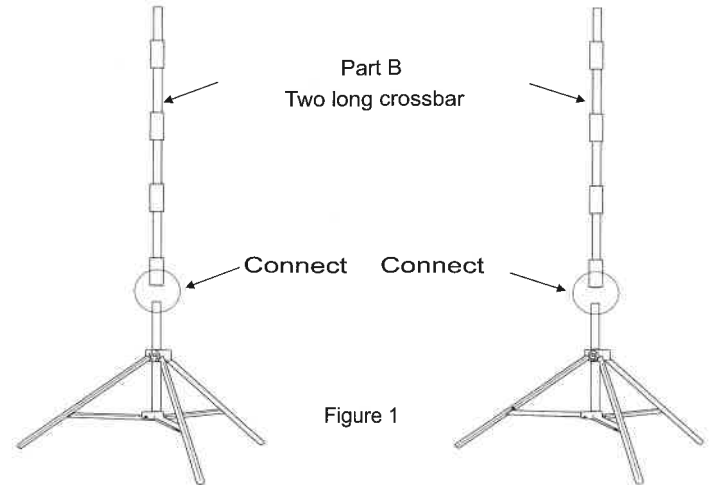

6. As shown in Figure 1:

- (1) Connect the left and right sides of the assembled Part A screen (90° connectors) to Part B respectively.
- (2) The velcro of the curtain can fix the left and right sides to complete the installation.

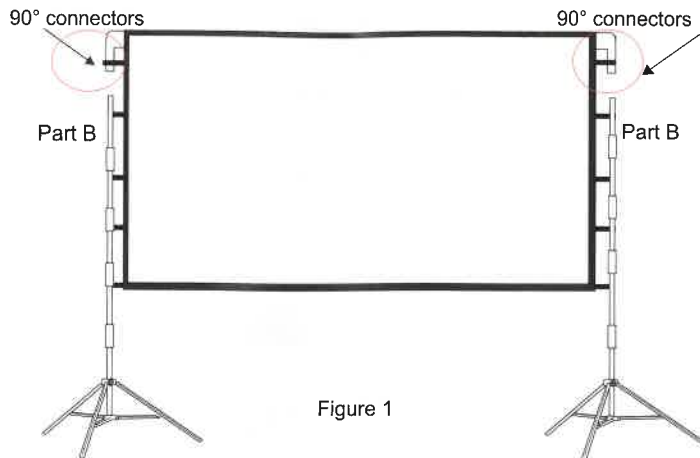

Scan the QR code below to watch the detailed installation video

Overall installed effect



Mail: [Towond2020@126.com](mailto:Towond2020@126.com)

If you have any questions,  
please feel free to contact our  
after-sales department